


## HKC – Changing the User Code



Changing the User Codes on the HKC Securwave panel requires that your code has 'full access' or 'master access' to the manager menu. If you don't have full access you need to call your installer.

These are your Menu Keys as layed out on the Keypad

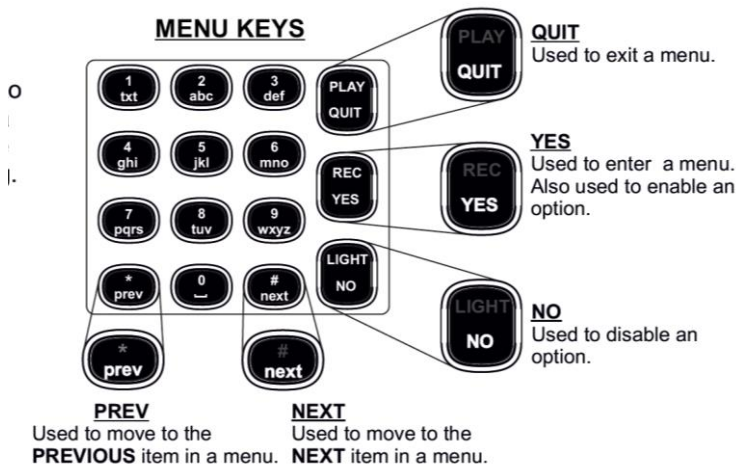

# Step one


## Enter your user code




The panel will Read Unset ? but we don't want Unset so press # until you come to User codes


## USER MENU

Press  followed by the User Code. The first User Menu item is...

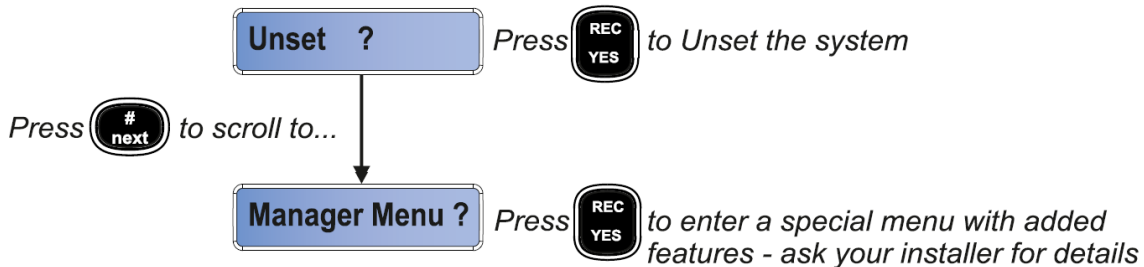

## MANAGER MENU

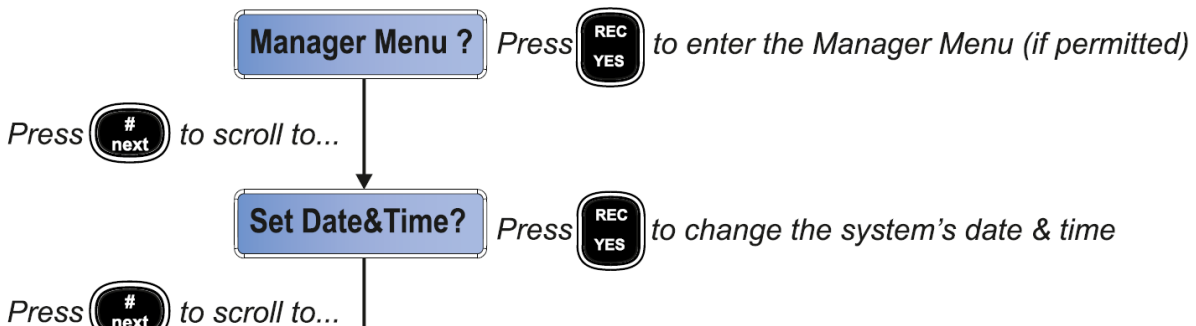

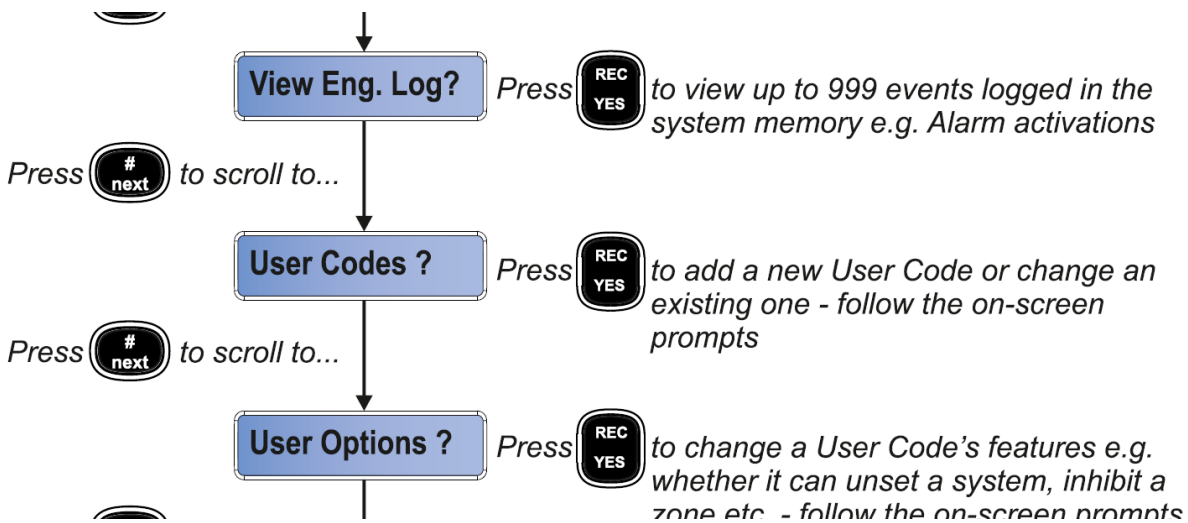

In the manager Menu  
 You have selected USER CODES and pressed YES  
 It will come up User 1 or User 2  
 Select the User you want to change  
 Eg you want to change User 1 code  
 User 1 – All Blocks select YES  
 This is where it will ask for a new Code  
**\*\*Code MUST be 4-6 digits with No 0 or cant end in a 9\*\***  
 Enter your new Code  
 Press Yes  
 It will ask to Verify  
 Enter Code Again  
 Press Yes  
 The Panel should read USER SUCCESSFUL  
 Press Quit a few times to leave the menu  
 Leave manager Menu – Press yes  
 You should be back to the Date & Time

## TEMPORARY USER

Create a temporary user code that is valid for a limited number of days; useful for users like tradesmen, cleaners etc.

Press **0** **\*** **6** Followed by User Code.

You will be prompted to enter a temporary user code number. Key-in your preferred code and press;



Verify code and press;



Enter the number of days you want the temporary user code valid for and press;



If you require further assistance please call us on 018241988 to discuss your queries

