



'Ellensborough' Knockmark, Drumree, Co Meath

Mobile: 087 9522223
Tel/Fax: 01 8241988

Email: paul@harris.ie
Web: www.harris.ie

How to adjust the light on Hikvision IP ColourVU CCTV


The latest ColurVu range from Hikvision allows you to see the CCTV image in colour at night.

One of the more frequent questions we get is how to turn down the 'white light'.

Here are the steps to reduced the white light or turn it off completely

To make these adjustments on the cameras you must log into the camera directly as each camera has its own individual settings


- Log in to your NVR through your browser (internet explorer recommended).
- Go to Configuration> Network> Advanced settings
- Select other and tick Enable Virtual Host, click save

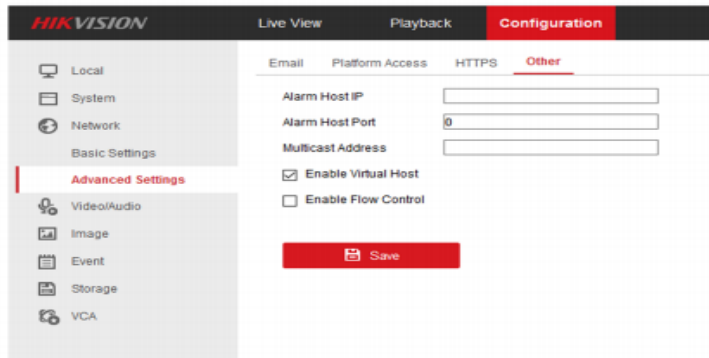

Now Virtual Host is enabled you are able to connect directly to your cameras through your NVR.

- Go to System > Camera management
- On the right handside in the Connect column you should see some html links
- Click the link for the camera you would like to access
- Input the login details for the camera
- You should now see the log inscreen for the camera.
- Log in using the camera's password. *Note this may be different to the NVR password, but typically is the same for a plug 'n play system.


Camera - Log in

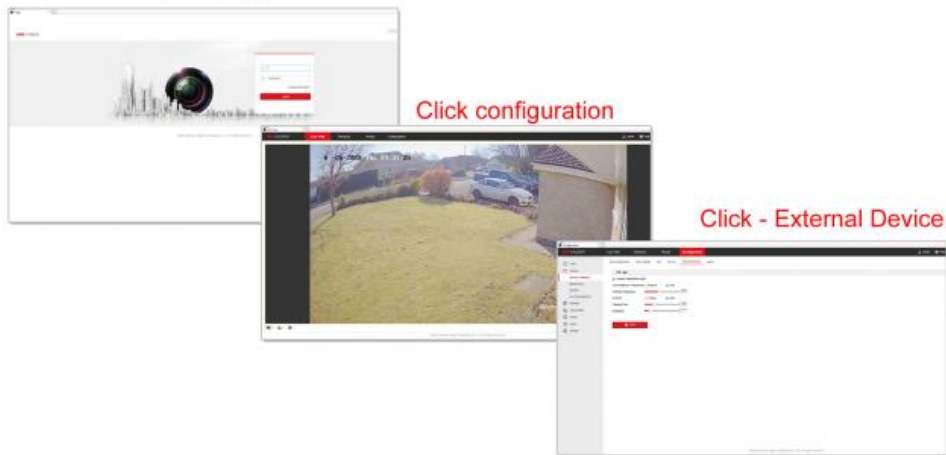


Now to access your White light settings

- Select Configuration
- Got to System then System Settings
- Select External Device
- From here you can enable, disable, adjust brightness or setup a schedule

Example below: The White Light LED Automatically comes on when ambient light level drops:

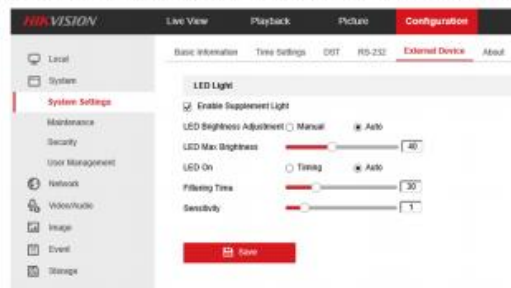

 Example below: The White Light LED comes on with a defined time schedule.

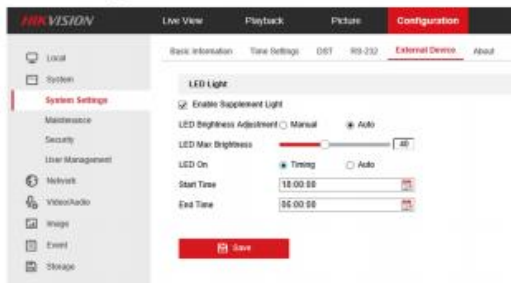

Adjust your White light settings as required and remember to click save. Note: the white light can also be set to adjust its own brightness (you set a maximum brightness) or it can be manually set (in which case you set a constant brightness for the LED).